

Traffic Tally® 2



1 Traffic Tally 2 (TT-2)

The TT-2 is a grand total accumulator that is suitable for both low-speed and high-speed counts. It can be set out over and over without complicated setups or reconfiguration.

After securing the road tube to the road, connect the road tube to the counter.

Swiping the magnet over either dot (Red or Yellow) will activate the display as the counter is always on, even when the display is off.

The Yellow dot is referred to as Display and changes menus.

The Red dot is referred to as Reset and changes menu items.

* TT-2 *
Ver: 1.26

RELEASE:
05/12/15

The version and release date information will display for 2 seconds, then automatically show the total screen.

TOTAL:
X

If '/2' is shown on the top line, this will indicate that the unit is automatically dividing every axle strike by 2. The displayed number on the bottom row would be a 2-axle vehicle count.

If the top line matches the example on the left, the number displayed is the number of times the tube was activated.

2 New Count Reset

RESET!!!
SURE?

Swiping the Red dot will display the option to reset the count.

Swipe the Yellow dot to begin the reset process. Swipe the Red dot to cancel.

NOTE: One of the dots (Red or Yellow) needs to be activated within 5 seconds. If there are no activations, the TT-2 will advance to the next menu until the setup is complete (about 15 seconds).

3 Divide by 2

The counter display will read:

To change the selection (**Yes/No**), swipe the magnet on the Red dot.

DIVIDE/2
? NO

Swipe the Yellow dot to advance to the next setup question.

Divide/2 will increase the count by 1 for every two hose strikes (this is the most common count method used).

4 High/Low Speed

If vehicle traffic is consistently at 10 MPH (16 KMH) or slower, we recommend using the **Low** speed setting.

Units running firmware version 1.22 or older will not see this menu option.

Speed?
High

Change the selection by swiping the Red dot or swipe the Yellow dot to complete setup.

Setup is
Done!

TT-2 setup is now complete and will continuously count vehicles. The display will go blank after 2 minutes of no user activity, and this is normal.

Additional Information:

Please refer to the "General Guidelines for Road Tube Installation" for more information regarding road tube installation.



Diamond Traffic Products
 76433 Alder Street
 Oakridge, OR 97463
 diamondtraffic.com

Phone 541.782.3903
 Fax 541.782.2053
 sales@diamondtraffic.com